

HOW TO PLACE YOUR WOODY ON A WALL

In the package


What else will u need?

Tips & tricks

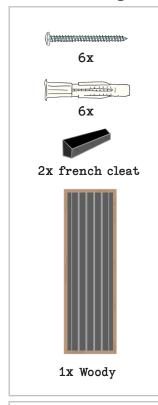

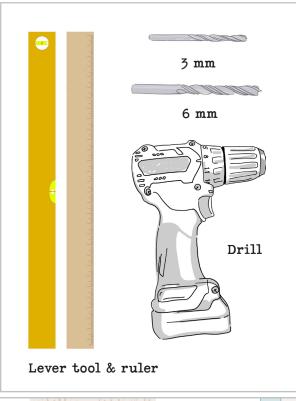







The plugs inside the package fits only into masonry and concrete walls.



If you have a **wooden** wall, you won't need a plug at all ...



... but into


plasterboard wall or

hollow bricks, you'll


need to buy another

special plug - which is


not included.

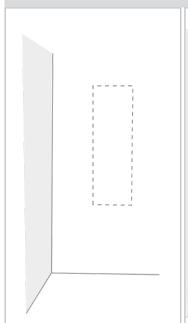

1. Choose the best place for your Woody. If unsure check out our Tips & tricks articles.

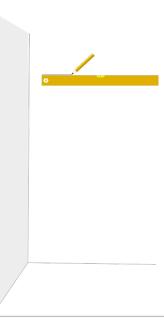



2. Use a **lever tool** to draw a **horizontal line** in the height where you wish to place your Woody.

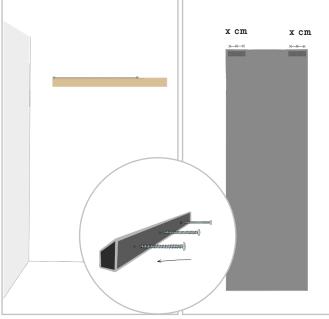


3. Mark the spots where you'll need to drill holes for the plugs and screws in the wall.

4. Make sure the distance between the marked spots = the distance between the holes in the french cleat which should fit onto its other part already placed on the back side of your Woody.

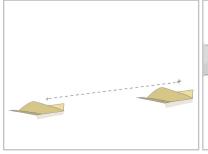

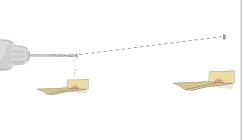


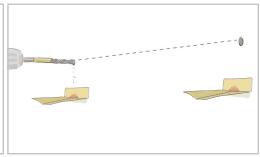



5. To eliminate mess from the crumbling wall while drilling, place **sticky notes** sheets under the marked spots.

6. Use the **smaller drill first** (3 mm) to avoid bigger damage on plaster and masonry.

7. Repeat drilling with the 6 mm drill size = the same size as your plugs.








8. Insert the plug into each drilled hole.

9. Make sure it fits properly.

10. Screw 3 screws into both french cleats.

11. Now it should hold tight.

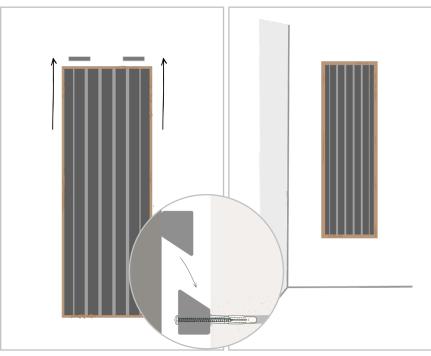



12. Place your Woody onto the french cleats. If there's a friend around, ask them to help you.

13. Admire your work.

13. Let's clean it all up for a bit... ... and you're ready Freddie

THE END **CONGRATS! NICELY DONE!**

Was this helpful? Do you have any question? Don't hesitate to contact us!



Different wall materials require different types of fixing devices. If you are uncertain about what type of screws and plugs to use, please contact your local hardware store.



