


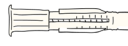
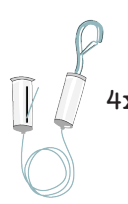
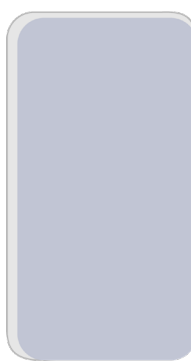
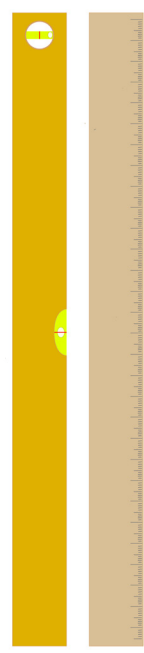



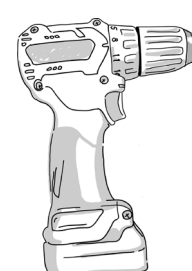

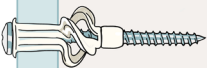



WHAT WILL YOU NEED FOR INSTALLATION

Mounting accessories	Tools (not included)	Keep in mind 
 4x  4x  4x  4x  1x PET fleece Absorber	 Ruler & Spirit level  3 mm  6 mm   Screwdriver & drill	<ul style="list-style-type: none"> Make sure to examine the condition and load carrying capacity of the ceiling before installation. The plugs inside the package fit only into masonry and concrete walls. <div style="border: 1px solid gray; padding: 5px;">  If you have a wooden wall, you won't need a plug at all ... </div> <div style="border: 1px solid gray; padding: 5px;">  ... but into plasterboard wall or hollow bricks, you'll need to buy another special plug - which is not included. </div>



Unboxing: Open the package carefully! Using sharp objects can damage the absorber. **Avoid using long scissors and knives.**

HOW TO PLACE YOUR ABSORBER ON A WALL

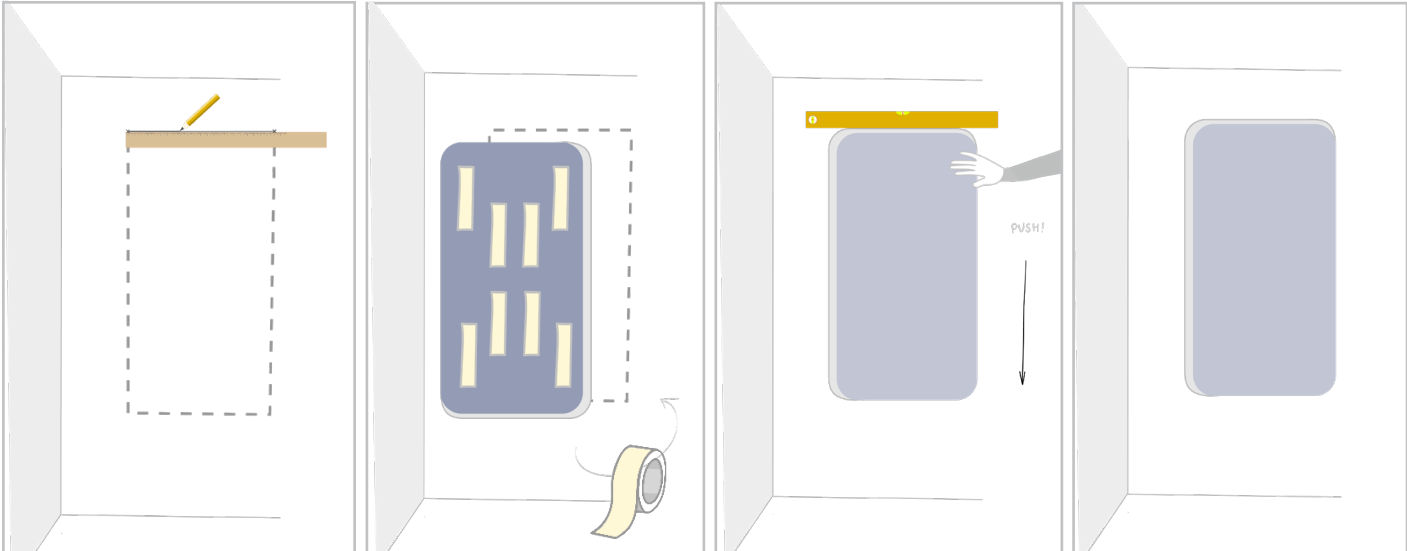

1. Choose the best place for your absorber. If unsure check out our **Tips & tricks articles**. Use a **ruler** to mark the chosen spot.


2. Place the stripes of tape on the absorber. (At least 8 pcs of 10 cm tape per 117x57 cm panel).

PS. Make sure the wall is clean so the tape can stick to it and hold. The amount of tape needed may vary depending on the conditions of the wall.

3. Gently place the absorber. Let it touch the wall only with the upper edge at first. Confirm that the absorber is **straight using spirit level**. Push to attach.


4. Admire your work.

HOW TO PLACE YOUR ABSORBER ON A CEILING

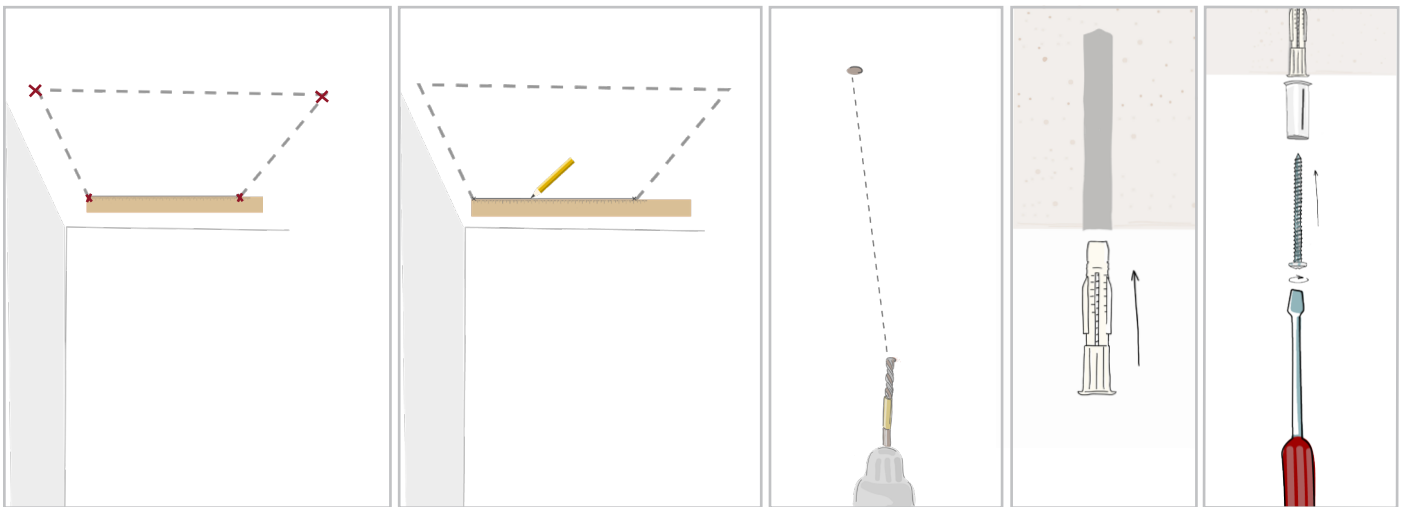

1. Choose the best place for your absorber. **Mark the spots for drilling.** To be sure you can measure the distances between the dowels inserted in the absorber and see if your marks has the same distances.

2. Drill the holes at the marked spots. **Insert the dowels** into the drilled holes. **Fasten all four holders** of the wire ropes with four screws to the ceiling.

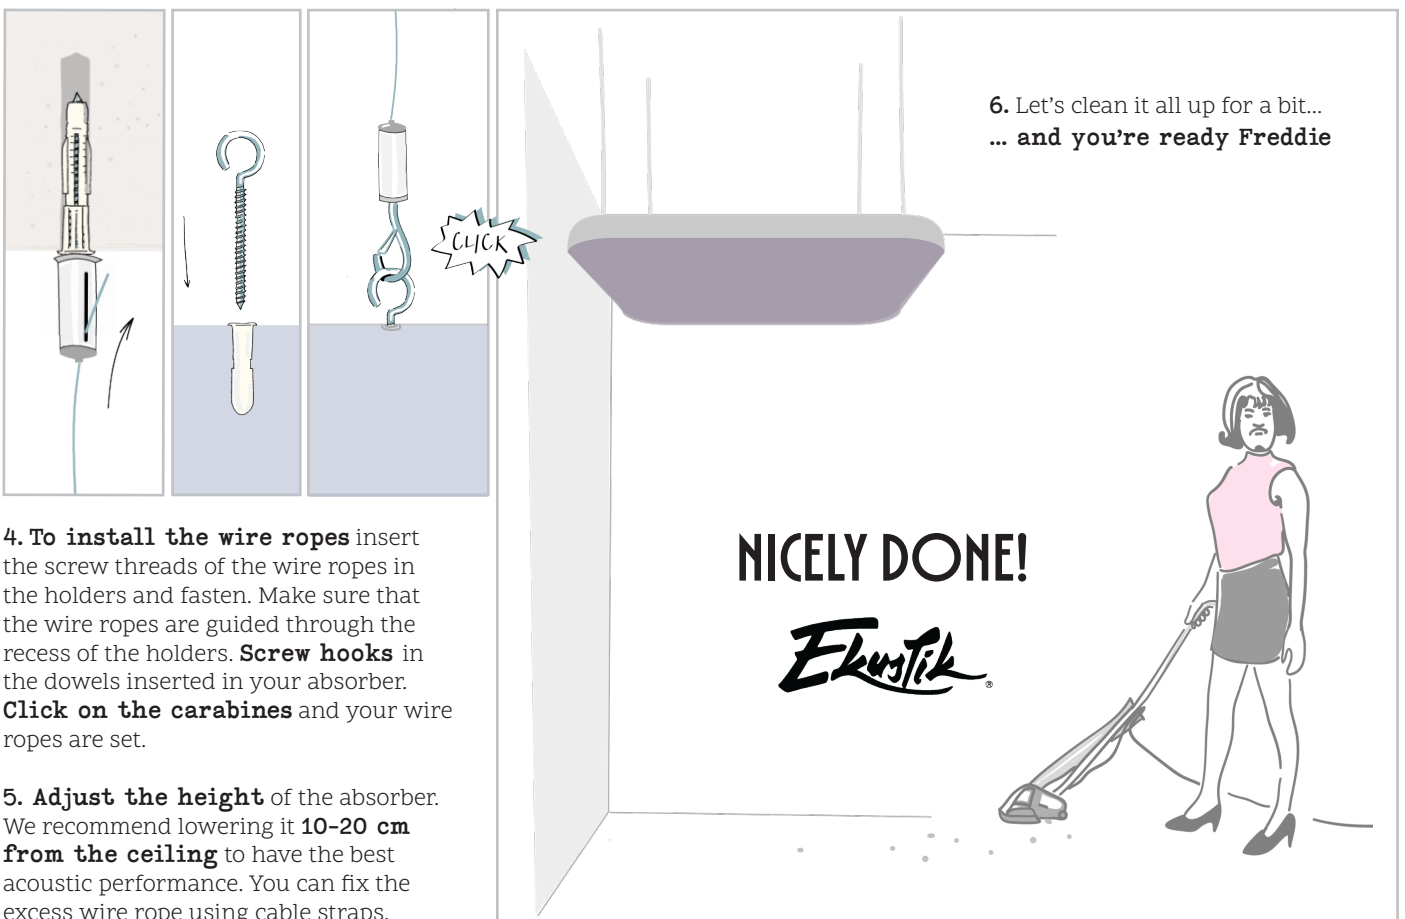

4. To install the wire ropes insert the screw threads of the wire ropes in the holders and fasten. Make sure that the wire ropes are guided through the recess of the holders. **Screw hooks** in the dowels inserted in your absorber. **Click on the carabines** and your wire ropes are set.

5. Adjust the height of the absorber. We recommend lowering it **10-20 cm from the ceiling** to have the best acoustic performance. You can fix the excess wire rope using cable straps.

6. Let's clean it all up for a bit...
... and you're ready Freddie

NICELY DONE!

Ekustik

Was this helpful? Do you have any question? Don't hesitate to **contact us!**



Different wall materials require different types of fixing devices. If you are uncertain about what type of screws and plugs to use, please contact your local hardware store.

